

Liner Measurements
V & W Liners
Lab A Oil Consumption Kit
Highlighted

David Brass

Average of Rk & Average of Ra vs. Liner #




Average of MR1 & Average of MR2 vs. Liner #



Z = "W" Batch Liners used in
Lab A Oil Consumption Tests

Average of Rpk & 2 more vs. Liner #

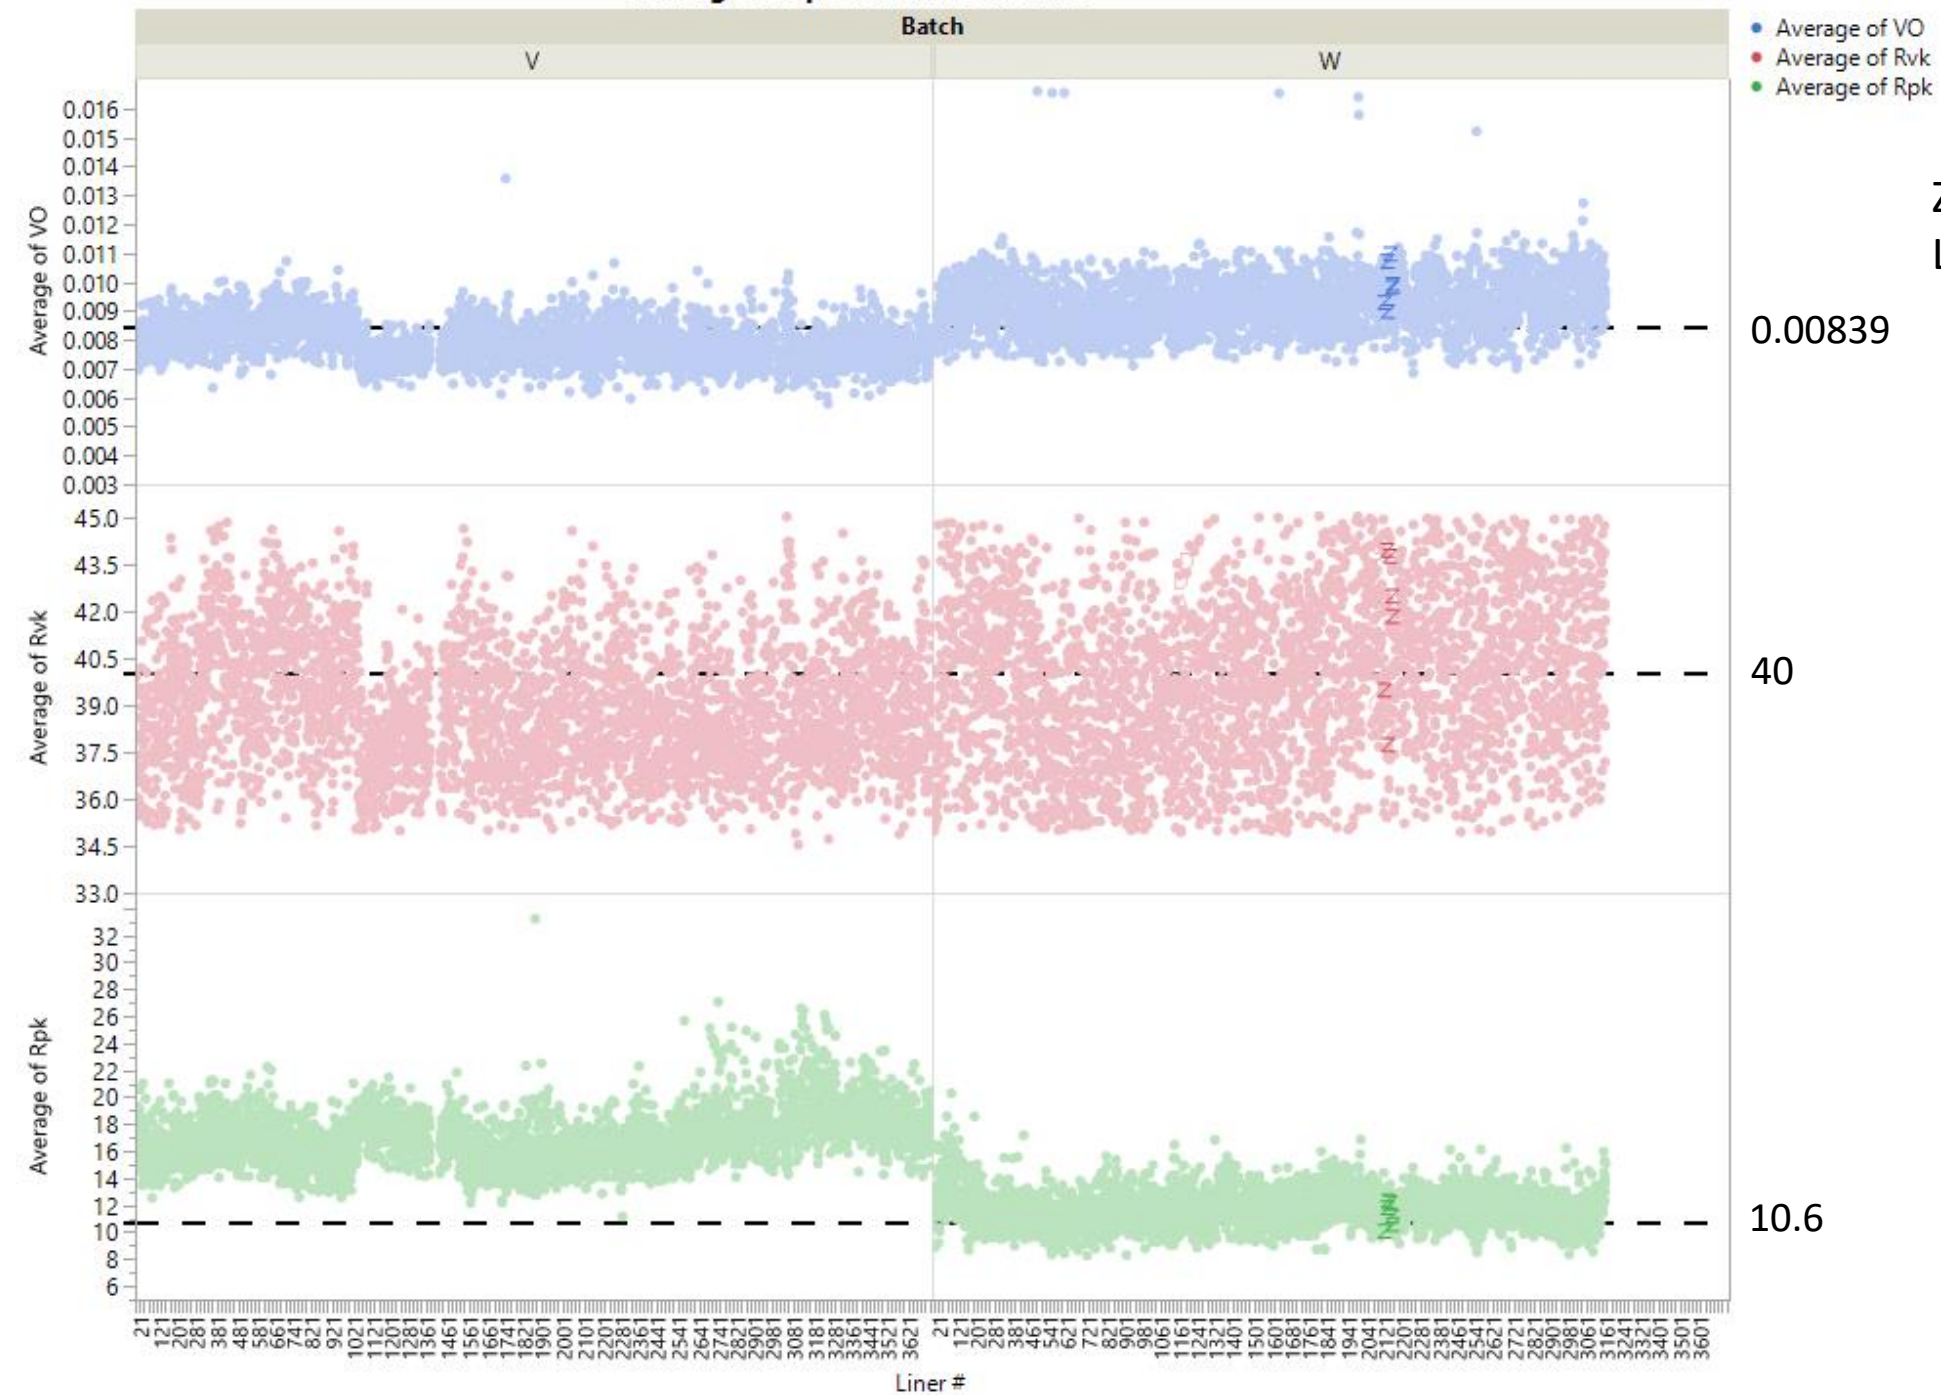

Z = "W" Batch Liners used in
Lab A Oil Consumption Tests

0.00839

40

10.6